

Introduction

Congratulations on your purchase of the Motorola *homesight*™ Wireless Signal Repeater. The Wireless Signal Repeater can act as an amplifier to stretch the communication distance from your Wireless System Controller to your system’s wireless sensor devices.


The Motorola Wireless Repeater will work with up to 16 devices at a time.

Using Your Signal Repeater

The repeater must be placed between the Wireless System Controller and the device whose signal you wish it to repeat. When positioning, avoid obstructions and metallic structures that might interfere with its functionality.


How It Works

The Wireless Signal Repeater can communicate with the Wireless System Controller to a distance of up to 18 m indoors. The unit relays the signals to and from the Wireless System Controller and a wireless device, effectively doubling the communication distance.

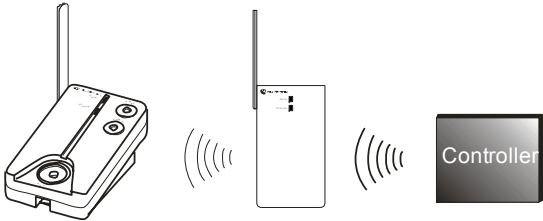

Installation Overview

Your package contains the following:

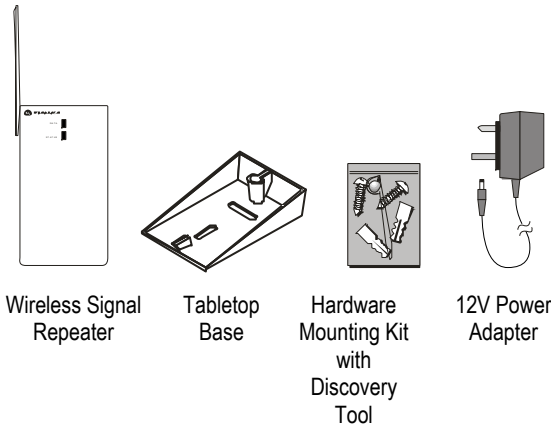

Installing your repeater is a simple two-step process.

- 1 Choose an appropriate location for the Wireless Signal Repeater as described in the Installation Hints.
- 2 Plug the AC adapter into the wall and the module.
- 3 Register your Repeater module with your Wireless System Controller using a process called Discovery.
 - a. In the *homesight* software, click on **System Settings**.
 - b. Select “Device Discovery” from the menu, then select “Start Discovery”.
 - c. After a few seconds, the System Controller will find and register your Repeater and details of the device will appear on the screen.
- 4 Position the Repeater, using either the tabletop base, or by following the instructions for wall mounting.


Installation Hints

The Motorola Wireless Signal Repeater is constructed of UV-resistant ABS plastic. Therefore, please consider the following points when mounting the repeater:


- Do not install the repeater where it is subjected directly to the elements.
- This device's communication range is up to 18 m from the Wireless System Controller in a typical home, depending on the number of obstacles. These can include metal framing, thick walls, and other wireless devices operating at 433 MHz. It is recommended that different positions be tried for optimal results.

Table Mount Your Wireless Signal Repeater

The repeater can be placed on any level surface using the included tabletop adapter. To attach the adapter, press the adapter into the holes in the back of the repeater.

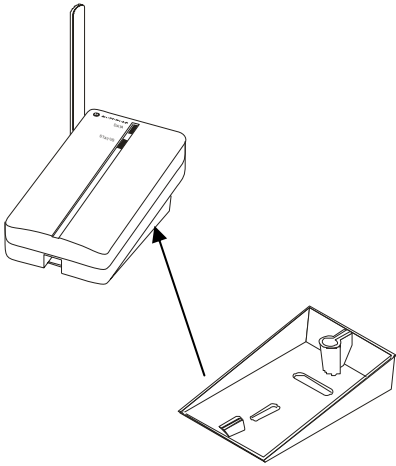

Feature Locator

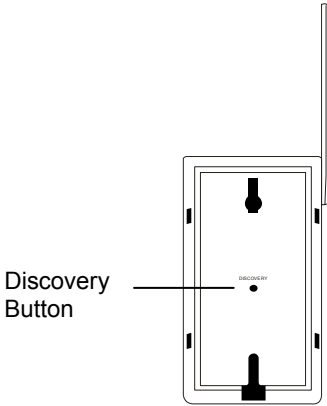


Installing Your Wireless Signal Repeater

Your repeater can either be mounted on a wall or sit on a level surface.

Wall Mount Your Wireless Signal Repeater

Warning: When mounting near a window, drilling too close to the glass could break the glass and possibly cause it to shatter. The window extends deeper into the frame than can be seen; therefore, ensure your screw is beyond the glass before drilling.

 - 1 Using the supplied double-sided tape, peel one side of the paper strip and place it on the back of the repeater. Peel the other side of the tape and place the repeater in the location desired.
- 2 You can also mount the sensor more securely using the screws in the hardware kit. Using the holes on the drilling template found later in this guide, mark the position of the holes to be drilled. For drywall or other composite surfaces, use a 5.6 mm drill bit. Drill a hole for each of the mounting screws and insert a plastic wall anchor into each hole. For other solid surfaces, use a 1.6 mm drill bit. Drill a pilot hole for each of the mounting screws.

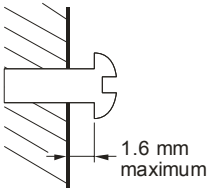

Troubleshooting

Problem	Solution
Repeater will not register with the Wireless System Controller.	<ul style="list-style-type: none">• Ensure that the Repeater power adapter is plugged in to a reliable source.• Ensure that the Device Controller is powered and online.• Ensure that you are pressing the Discovery button.• Reposition the Repeater closer to the System Controller.• Try another location free of obstacles.
Unable to discover the device	Make sure your Wireless System Controller indicates discovery mode and that the Repeater is powered from a reliable AC source. Press the Discovery button found on the back side of the unit. If your mounting bracket is attached, remove it to find the discovery button hole. If this continues to fail, you will need to try another location for the repeater. You may also try a hard reset by holding down the Discovery button while powering on the Repeater. After resetting the Repeater, please try to discover it again.

Features and Specifications


- Wireless connectivity to the System Controller
- LED in Repeater illuminates when activity occurs
- All hardware for either wall or tabletop mounting included
- AC adapter included

Communication frequency:	433 MHz
Typical open air range (line of sight):	60 m
Typical range indoors:	18 m
Overall size:	100mm L × 59mm W × 28mm D
Operational temperature/ humidity:	0° to 40° C with 10% to 80% humidity with all components operating within manufacturer thermal limits
Storage temperature:	-25° F to 75° C

Wall Mount Drilling Template

Mounting tools: Screwdriver, electric drill, or hand drill. On hard surfaces, Motorola recommends that you pre-drill 12.7 mm deep pilot holes with a drill bit slightly smaller than the mounting screws before securing the repeater to the surface. When mounting a repeater on soft surfaces like sheetrock, use an awl to punch holes in the material slightly smaller than the plastic anchors included in the hardware mounting kit.

 The illustration is drawn to a one-to-one scale, which means that it provides the exact dimensions required to mount the unit.

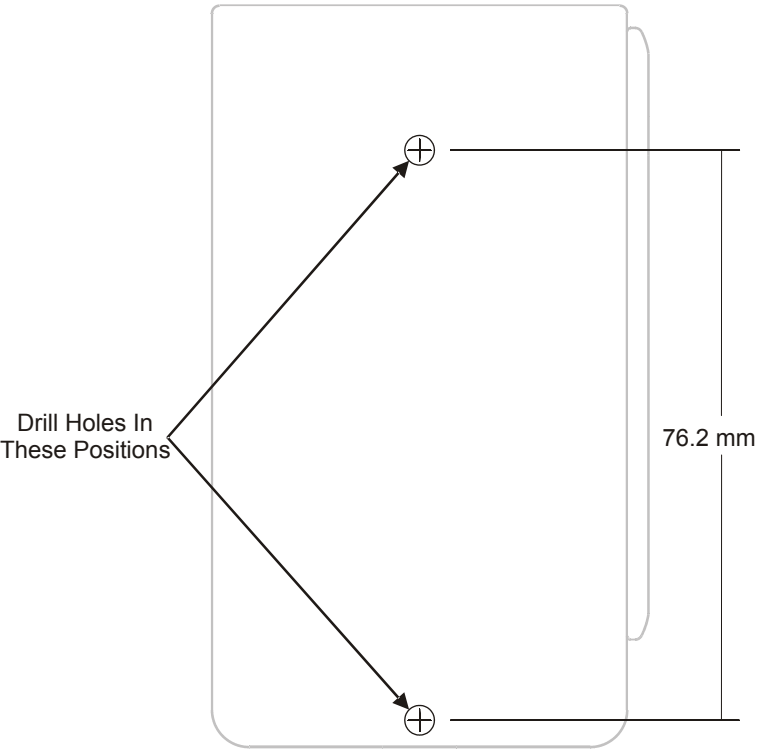

Regulatory Information



CE Declaration of Conformity

We: Motorola, Limited.
Connected Home Solutions
Jays Close, Viabiles Industrial Estate
Basingstoke, Hampshire
RG22 4PD

declare under our sole responsibility that the following product(s):

Model #	Alias	Description
XRT750E	HMAC9101	Wireless Signal Repeater
XHA750E	HMSC7071	Wireless Keypad Kit
XWS50ME	HMSM4051	Wireless Motion Sensor
XWS30WE	HMSM4161	Wireless Water Sensor
XWS20TE	HMSM4151	Wireless Temperature Sensor
XWS10DE	HMSM4141	Wireless Door/Window Sensor

is (are) in conformity with the following relevant harmonised standard:

EN 301 489-1 V1.4.1:2002
EN 301 489-3 V1.4.1:2002
EN 300 220-1 V1.1.1:2000
EN 300 220-3 V1.1.1:2000

following the provisions of Article 3.2 of R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity, in accordance with the conformity assessment procedures identified in Article 10(5) and Annex IV..

Caring for the Environment by Recycling



When you see this symbol on a Motorola product do not dispose of the product with residential or commercial waste.

Recycling your Motorola Equipment

Please do not dispose of this product with your residential or commercial waste. Some countries or regions have set up systems to collect and recycle electrical and electronic waste items. Contact your local authorities for information about practices established for your region. If collection systems are not available, call Motorola Customer Service for assistance.

Limited Warranty

Wireless Repeater

Motorola, Limited., Connected Home Solutions ("Motorola") of Jays Close, Viabiles Industrial Estate, Basingstoke, Hampshire, RG22 4PD. Limited Warranty. Motorola warrants to you, the original end user customer, that (A) the Product, excluding Software, will be materially free from defects in materials and workmanship under normal use, and (B) with respect to Software, (i) the media on which the Software is provided will be free from defects in material and workmanship under normal use, and (ii) the Software will perform materially as described in its documentation.This Limited Warranty to you, the original end user customer, continues (A) for Software and the media upon which it is provided, for a period of ninety (90) days from the date of purchase from Motorola or an authorised Motorola reseller, and (B) for the Product (excluding Software), for a period of two (2) years from the date of purchase from Motorola or from an authorised Motorola reseller. To take advantage of this Limited Warranty or to obtain technical support, you must call the Motorola toll-free phone number (below). Motorola's sole and exclusive obligation under this Limited Warranty for retail sales shall be to repair or replace any Product or Software or refund all or part of the purchase price that does not meet this Limited Warranty. All warranty claims must be made within the applicable Warranty Period.

This limited warranty applies to all Product sales in the UK only.

General Information. The warranties described in this Section shall not apply: (i) to any Product subjected to accident, misuse, neglect, alteration, Acts of God, improper handling, improper transport, improper storage, improper use or application, improper installation, improper testing or unauthorized repair; or (ii) to cosmetic problems or defects which result from normal wear and tear under ordinary use, and do not affect the performance or use of the Product. Motorola's warranties apply only to a Product that is manufactured by Motorola and identified by Motorola owned trademark, trade name or product identification logos affixed to the Product. Motorola does not warrant to you, the end user, or to anyone else that the Software will perform error free or without bugs. MOTOROLA IS NOT RESPONSIBLE FOR, AND PROVIDES "AS IS" ANY SOFTWARE SUPPLIED BY 3RD PARTIES. EXCEPT AS EXPRESSLY STATED IN THIS SECTION ("WARRANTY INFORMATION"), THERE ARE NO WARRANTIES OF ANY KIND RELATING TO THE PRODUCT, EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

If you are purchasing the product and software as a consumer then nothing in this limited warranty affects or limits any of your statutory rights as a consumer.

What additional provisions should I be aware of? Because it is impossible for Motorola to know the purposes for which you acquired this Product or the uses to which you will put this Product, you assume full responsibility for the selection of the Product for its installation and use. While every reasonable effort has been made to ensure that you will receive a Product that you can use and enjoy, Motorola does not warrant that the functions of the Product will meet your requirements or that the operation of the Product will be uninterrupted or error-free. MOTOROLA IS NOT RESPONSIBLE FOR PROBLEMS OR DAMAGE CAUSED BY THE INTERACTION OF THE PRODUCT WITH ANY OTHER SOFTWARE OR HARDWARE. ALL WARRANTIES ARE VOID IF THE PRODUCT IS

OPENED, ALTERED, AND/OR DAMAGED.

THESE ARE YOUR SOLE AND EXCLUSIVE REMEDIES for any and all claims that you may have arising out of or in connection with this Product, whether made or suffered by you or another person and whether based in contract or tort.

THIS PRODUCT IS INTENDED ONLY FOR USE TO FACILITATE HOME MONITORING AND CONTROL AND IS NOT INTENDED TO BE A SUBSTITUTE FOR A HOME SECURITY SYSTEM. MOTOROLA HEREBY DISCLAIMS ANY LIABILITY WHATSOEVER THAT MAY ARISE FROM THE USE OR INABILITY TO USE THIS PRODUCT AS A HOME SECURITY SYSTEM. IF YOU USE THE PRODUCT AS A SECURITY SYSTEM YOU DO SO AT YOUR OWN RISK. IN NO EVENT SHALL MOTOROLA BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR INJURY, LOSS OF PROPERTY, BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR ANY OTHER PECUNIARY LOSS), OR FROM ANY BREACH OF WARRANTY, EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL MOTOROLA'S LIABILITY EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT.

THIS PRODUCT EMPLOYS WIRELESS TECHNOLOGY AND, IN SOME CASES, MAY FACILITATE TRANSMISSION OF DATA OR VIDEO OVER THE INTERNET IN CONNECTION WITH ITS USE. THE CUSTOMER SHOULD UNDERSTAND THAT ALL WIRELESS TRANSMISSIONS MAY BE SUBJECT TO INTERCEPTION AND THAT DATA TRANSMISSION OVER THE INTERNET CANNOT BE GUARANTEED TO BE 100% SECURE. AS A RESULT, MOTOROLA CANNOT ENSURE OR WARRANT THE SECURITY OF ANY VIDEO OR DATA TRANSMITTED BY OR THROUGH THIS PRODUCT, WHETHER OR NOT TRANSMITTED VIA THE INTERNET, AND THE CUSTOMER USES SUCH PRODUCT AT HIS OR HER OWN RISK.

REMOTE ACCESS TO THE PRODUCT MAY REQUIRE YOU TO USE THIRD PARTY COMMUNICATION AND DATA TRANSFER DEVICES AND SYSTEMS, INCLUDING BUT NOT LIMITED TO CABLE AND TELECOMMUNICATION SYSTEMS, AS WELL AS THE INTERNET AND YOUR HOME COMPUTER. MOTOROLA HAS NO CONTROL OVER ANY OF THESE THIRD PARTY DEVICES, SYSTEMS OR SERVICES AND THEREFORE (i) CAN NOT WARRANT OR GUARANTEE THE AVAILABILITY, COMPATIBILITY, PERFORMANCE OR FUNCTIONALITY OF SUCH THIRD PARTY DEVICES, SYSTEMS OR SERVICES AND (ii) SHALL NOT BE LIABLE FOR ANY FAILURE OR INABILITY TO CONNECT REMOTELY OR TO USE THESE PRODUCTS WHERE THE CAUSE ARISES FROM SUCH THIRD PARTY DEVICES, SYSTEMS OR SERVICES.

Nothing in this limited warranty excludes or limit's Motorola's liability for death or personal injury directly caused by Motorola's negligence nor for liability arising from Motorola's fraudulent misrepresentation or strict liability under the Consumer Protection Act 1987.

These matters are governed by the laws of England, without regard to conflict of laws principles and excluding the provisions of the United Nations Convention on Contracts for the International Sale of Goods.

Please call the Motorola toll-free number, (0)845 601 0248, for technical support or warranty service.

Quick Start Guide

HMAC9100
Wireless
Signal Repeater



Visit our website at:

<http://www.motorola.com/uk/homesight>



Copyright © 2005 by Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

524134-001

7/05

MGBI